

- CH 1 - KICK DRUM // SHURE BETA91, SENN E901, AUDIX D6, SHURE BETA52
- CH 2 - ROLAND OCTAPAD SAMPLER // D.I. BOX
- CH 3 - ROLAND OCTAPAD SAMPLER // D.I. BOX
- CH 4 - SNARE TOP// AUDIX D2, AUDIX I5, SHURE SM57
- CH 5 - HI HAT // RODE NT55, RODE NT5 // ALI PODOBNO
- CH 6 - TOM 1 // AUDIX D2, SENN E904, E604, BEYER OPUS 88
- CH 7 - FLOR TOM // AUDIX D2, SENN E904, E604, BEYER OPUS 88
- CH 8 - FLOR2 TOM // AUDIX D2, SENN E904, E604, BEYER OPUS 88
- CH 9 - OVER HEAD LEFT // AKG C214, RODE NT55, RODE NT5 // ALI PODOBNO
- CH 10 - OVER HEAD RIGHT // AKG C214, RODE NT55, RODE NT5 // ALI PODOBNO
- CH 11 - BASS GUITAR AMP // D.I. BOX NA OJAČEVALCU, ALI SAMO LASTEN D.I. BOX
- CH 12 - GUITAR KEMPER PROFILER FLOORBOARD // D.I. ONBOARD
- CH 13 - GUITAR KEMPER PROFILER FLOORBOARD // D.I. ONBOARD
- CH 14 - KEYBOARD YAMAHA MOTIF // D.I. BOX
- CH 15 - KEYBOARD YAMAHA MOTIF // D.I. BOX
- CH 16 - KEYBOARD NORD ELECTRO // D.I. BOX
- CH 17 - KEYBOARD NORD ELECTRO // D.I. BOX
- CH 18 - VOX LEAD // SHURE BETA 58
- CH 19 - VOX GUITAR // SHURE BETA 58
- CH 20 - VOX KEYS // SHURE BETA 58

Chateau

RIDER

Električni priključek



Električni priključek

Klaviature / Vokal

**Monitor
AUX 4**

Bobni



**Monitor
AUX 5
XLR aux 6**

Električni priključek

ali samo lasten D.I. box

Električni priključek



Kitara / Vokal



Električni priključek



**Monitor
AUX 1**

Glavni vokal



**Monitor
AUX 2**

**Monitor
AUX 2**

Bass



Električni priključek

**Monitor
AUX 3**